



BRUTE IV optional safety guard INSTALLATION INSTRUCTIONS

For the following full coverage belt guards: PP-419-P-AY & PP-420-P-AY / For the following smooth center-guards: PP-411B, PP-411B-P-AY, PP-411B-C-AY, PP-611B, PP-611B-P-AY, PP-611B-C-AY and slotted center-guards PP-411-P-AY, PP-411-C-AY, PP-611-P-AY, PP-611-C-AY.


Do not operate or ride any motorcycle equipped with an “open” belt drive without an appropriate safety guard or shroud installed.

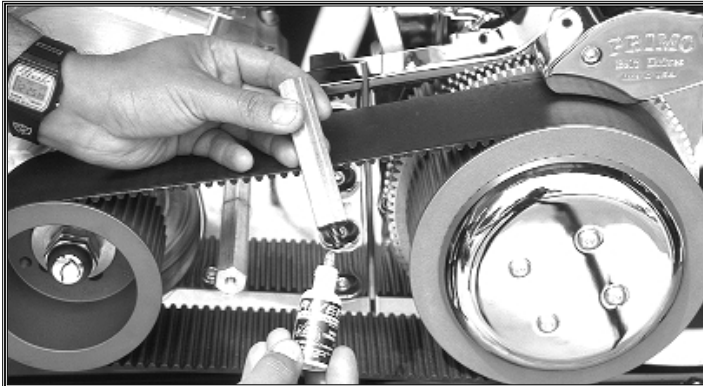


Apply one(1) drop of “Blue” threadlock to the stand-off studs.

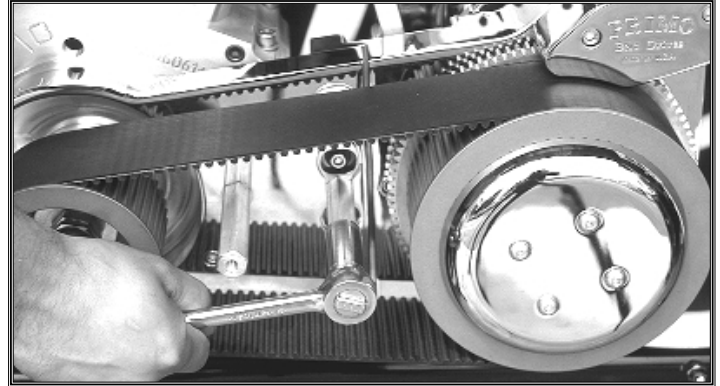

Tighten studs solidly in place. If your kit included 5/16” studs torque to 29 foot pounds. If your kit came with 3/8” studs, torque to 47 foot pounds.

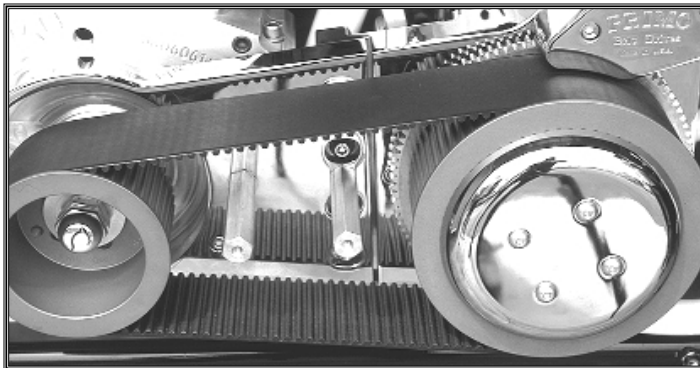

Studs are ready for the guard.

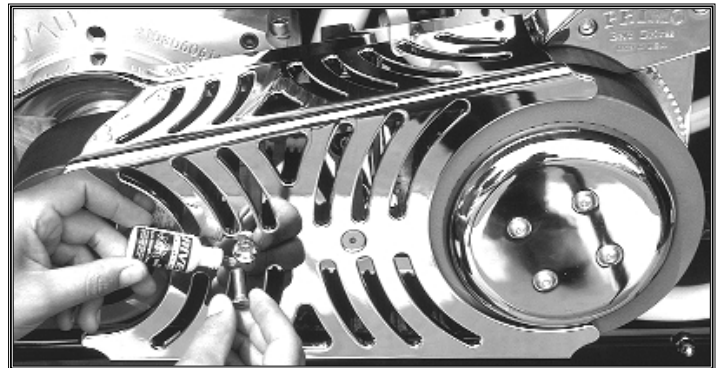

Apply one(1) drop of “Red” threadlock to the Allen bolts that hold the guard in place.



Tighten these bolts & torque to 29 foot pounds.



optional Billet Aluminum Guard
(chrome PP-411-C or polished PP-411)

optional Chrome cover
PP-106-4

Kick-stand stop
PP-401

Optional Brute IV accessories.